


overhang configurations (a)


Each system is available with an optional overhang to allow the covered area to protrude past the rafter profile.

Site specific overhang solutions such as stepped or wedge shapes are also an effective way to get maximum coverage for your area.

Type I

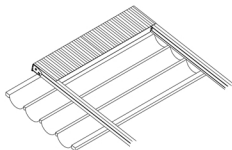

Type II

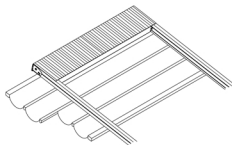

Type III

